

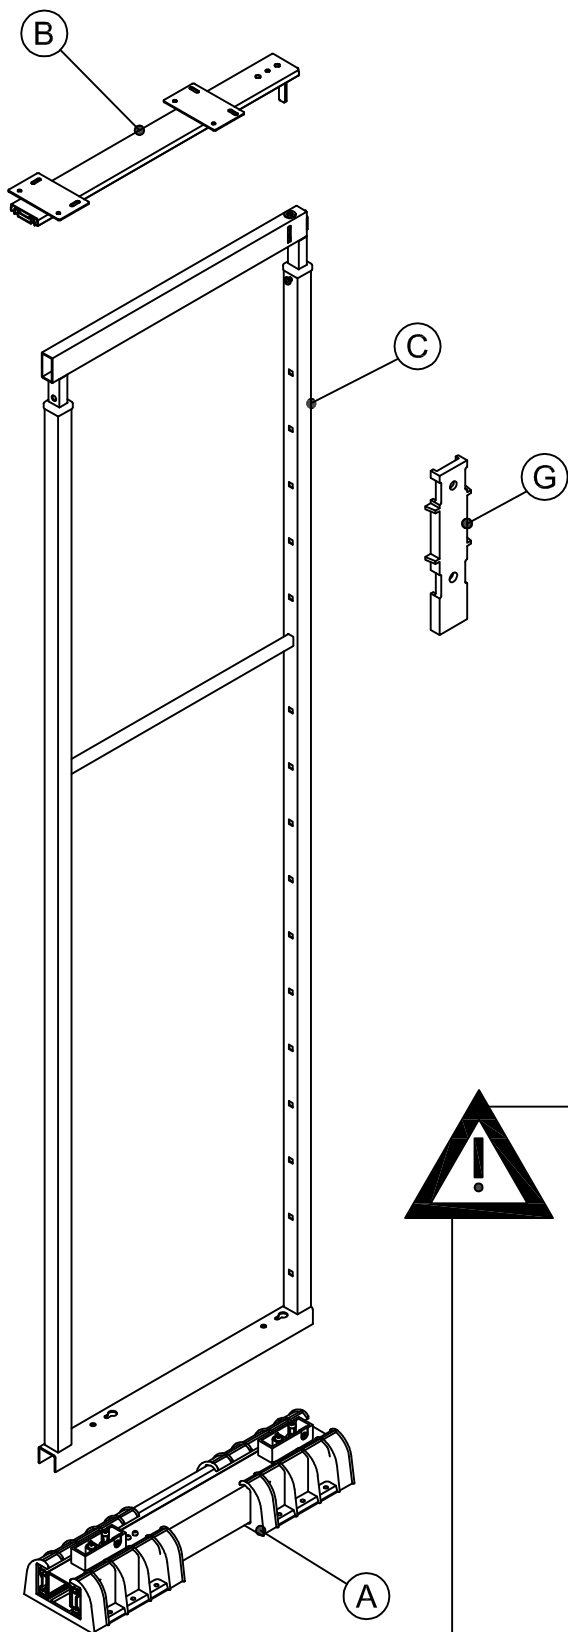
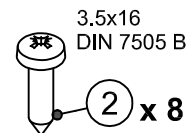
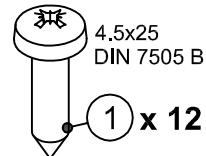


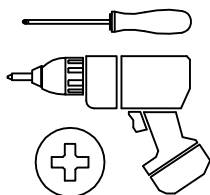


CESTELLI - Baskets



Art. 1816 - Wire

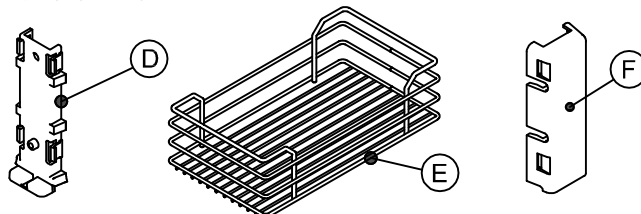

Art. 1204W - DeLuxe

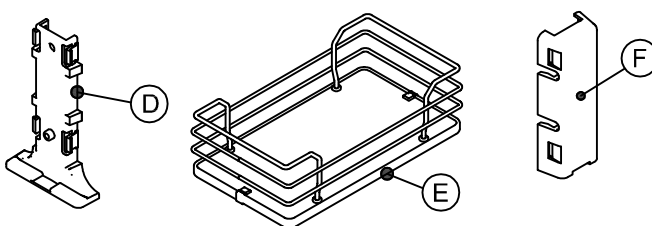


Art. 1204E - Ellite

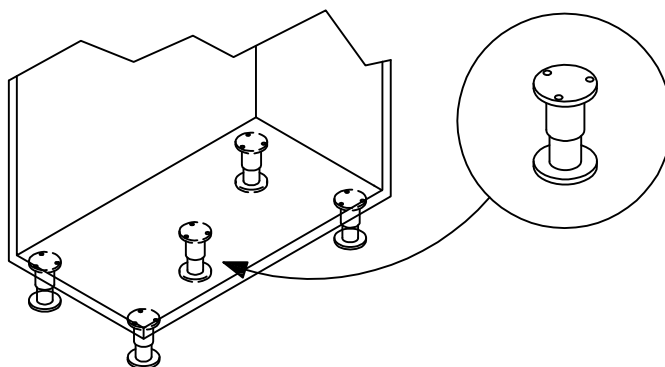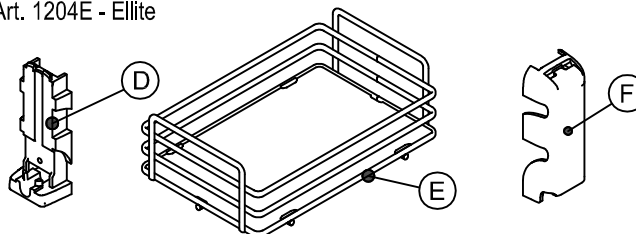


E' consigliato l'utilizzo di un piedino centrale
We recommend the use of a central foot


1

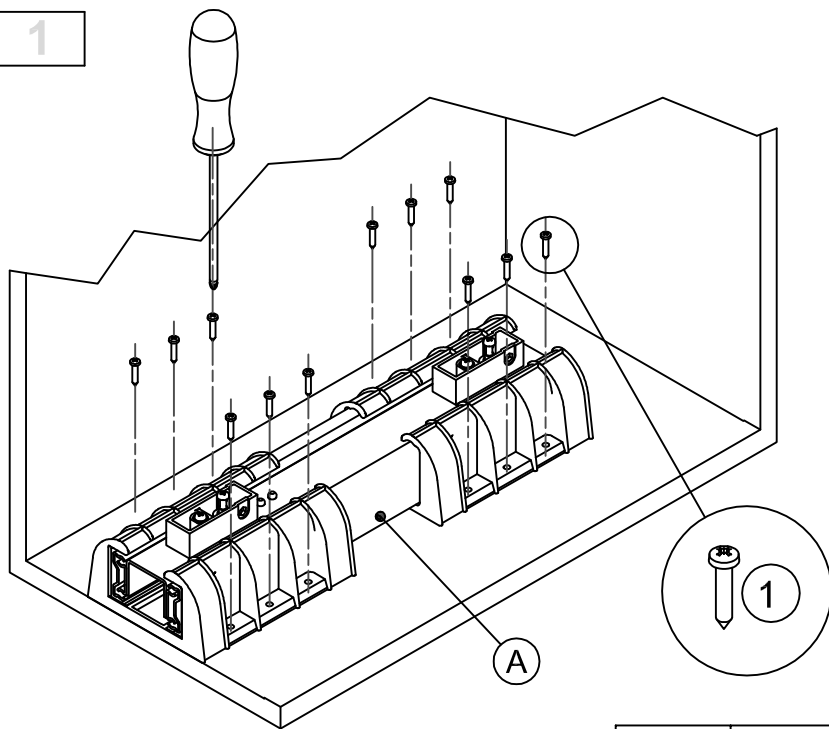


L [mm]	A [mm]
300	97
400	147
450	172
500	247
600	347




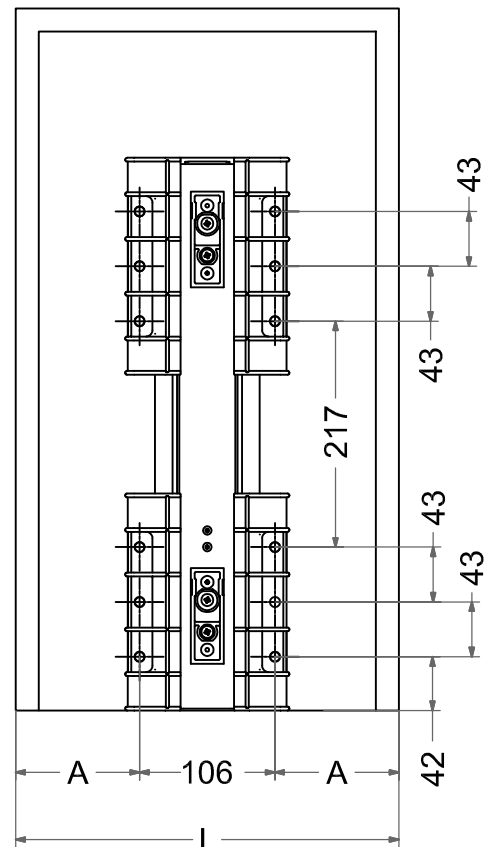


2

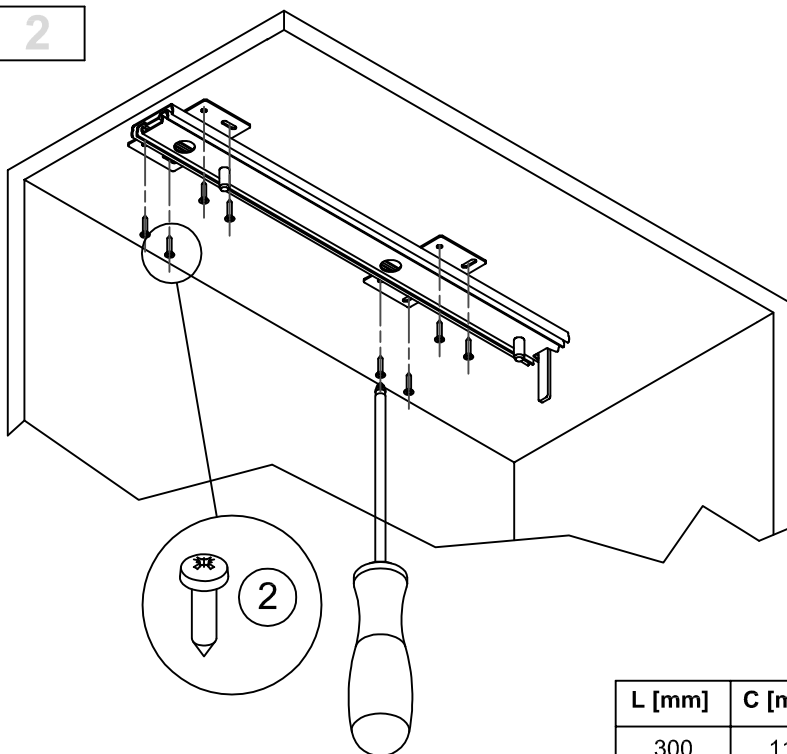


L [mm]	C [mm]
300	118
400	168
450	193
500	218
600	268

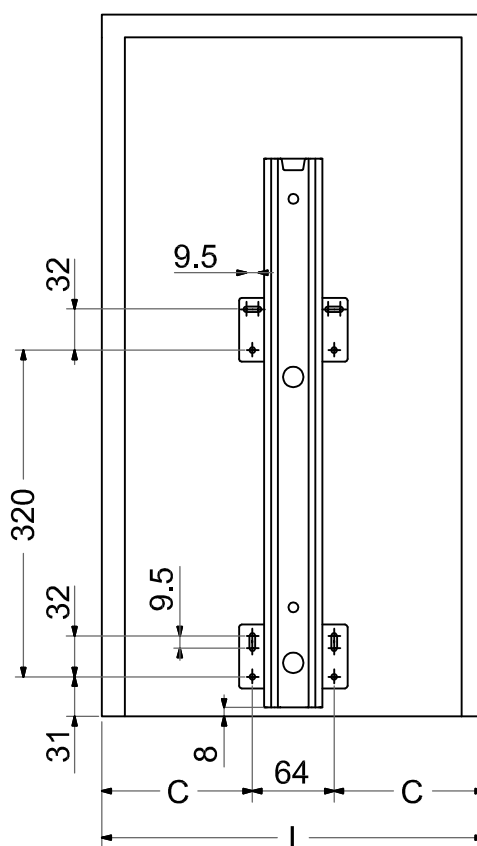



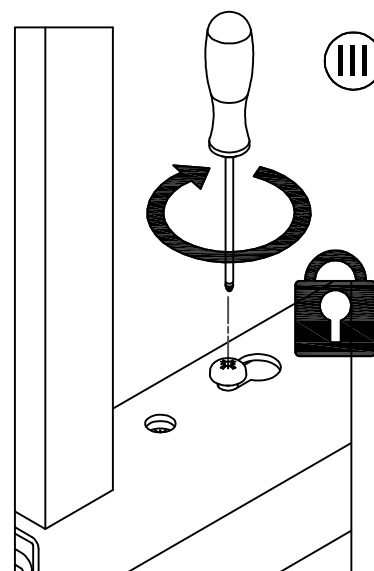
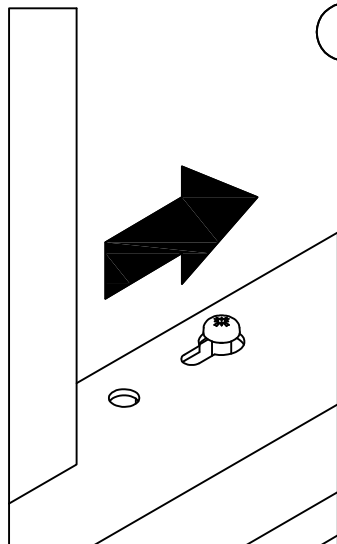
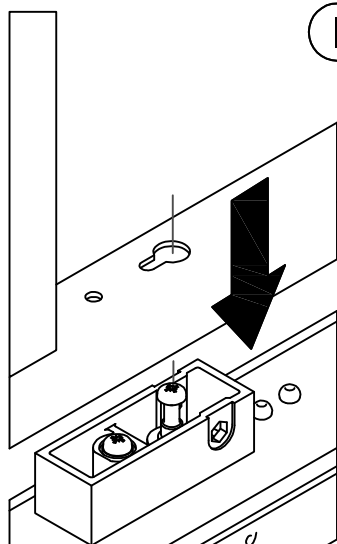
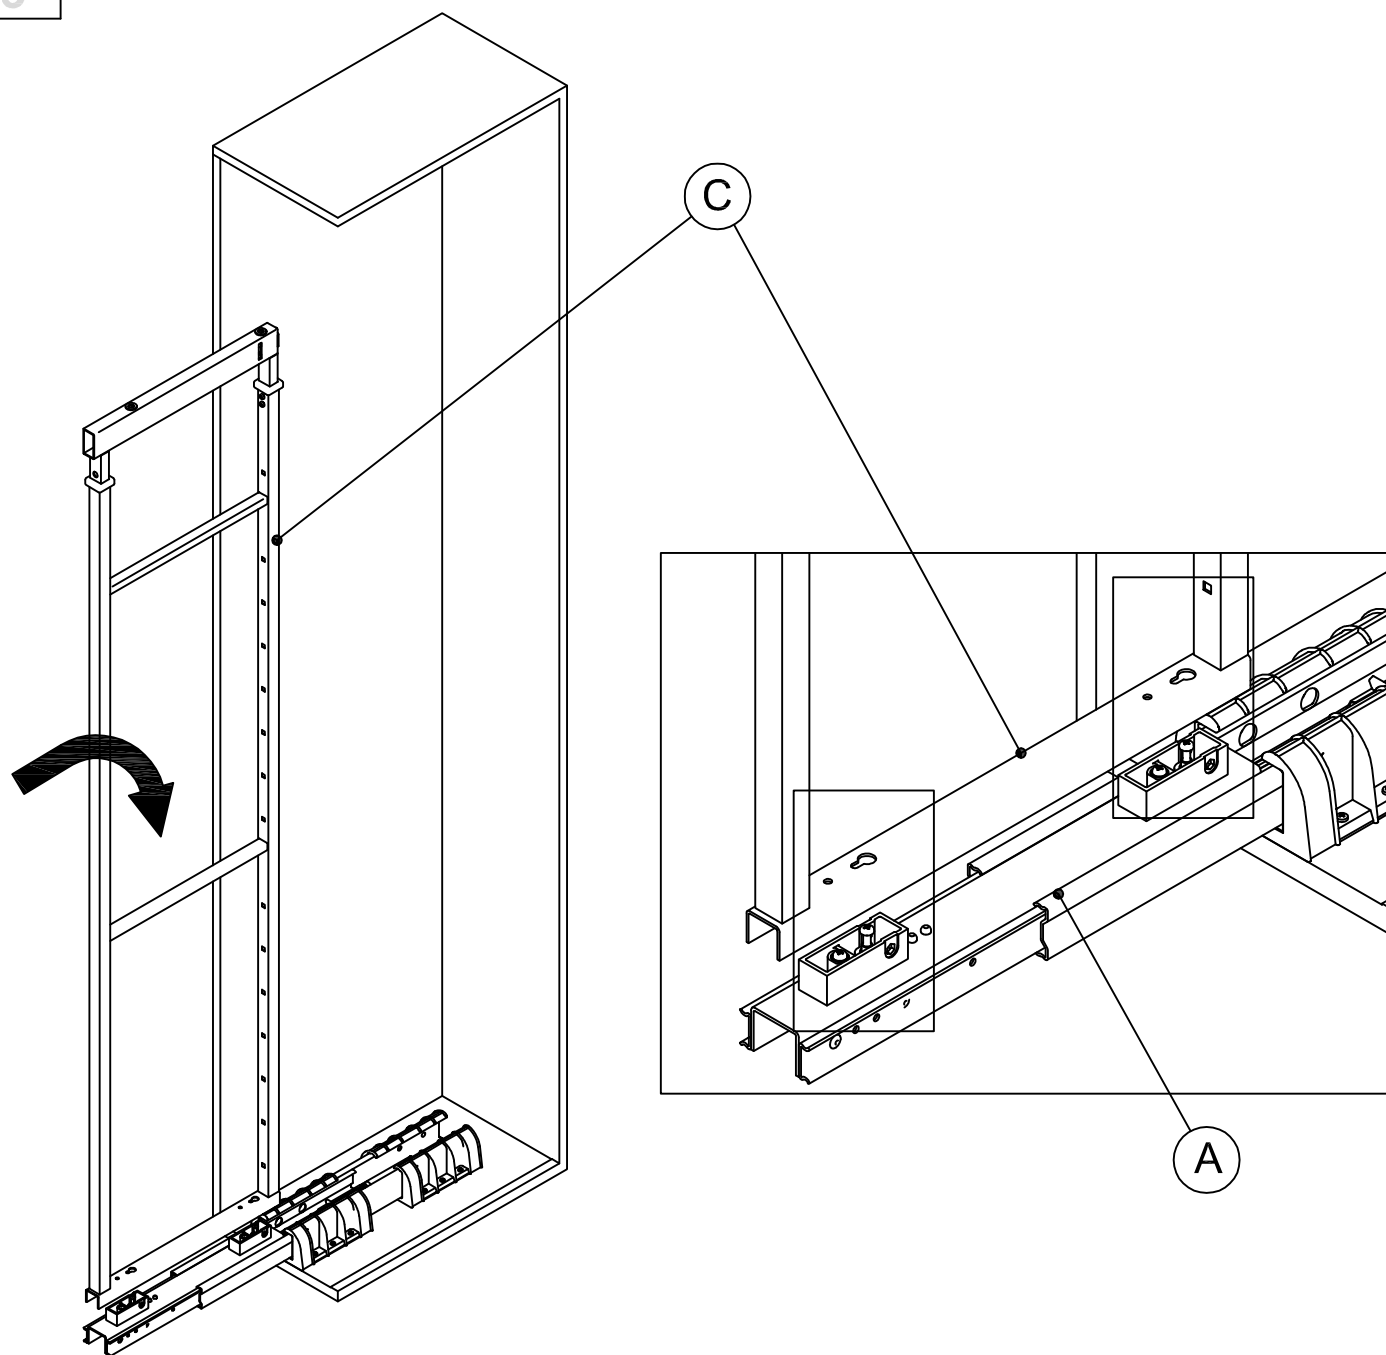


4

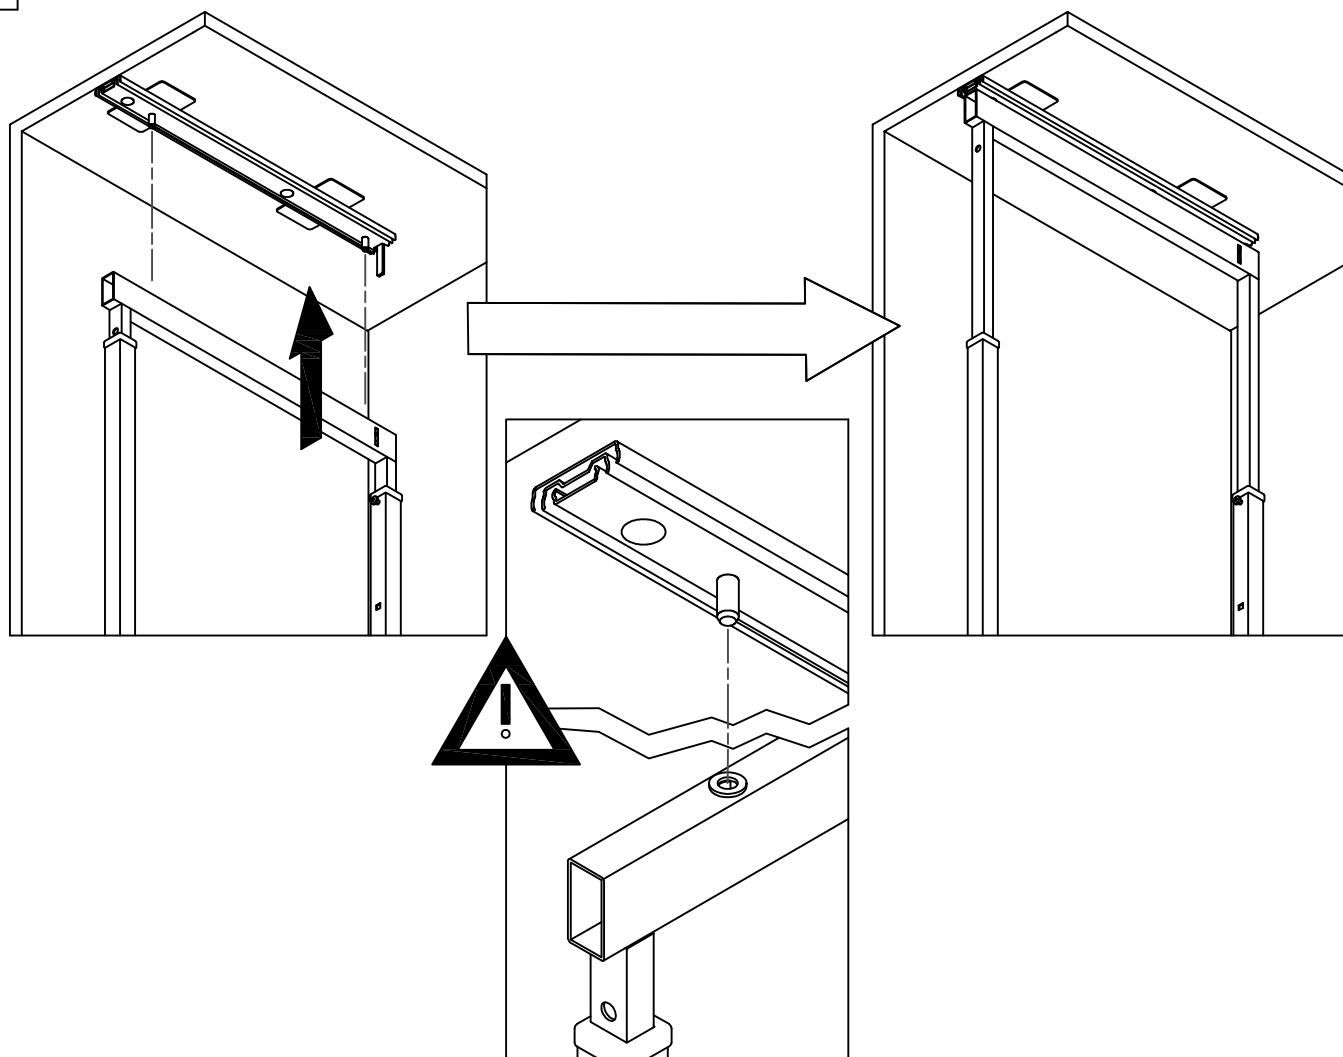


5

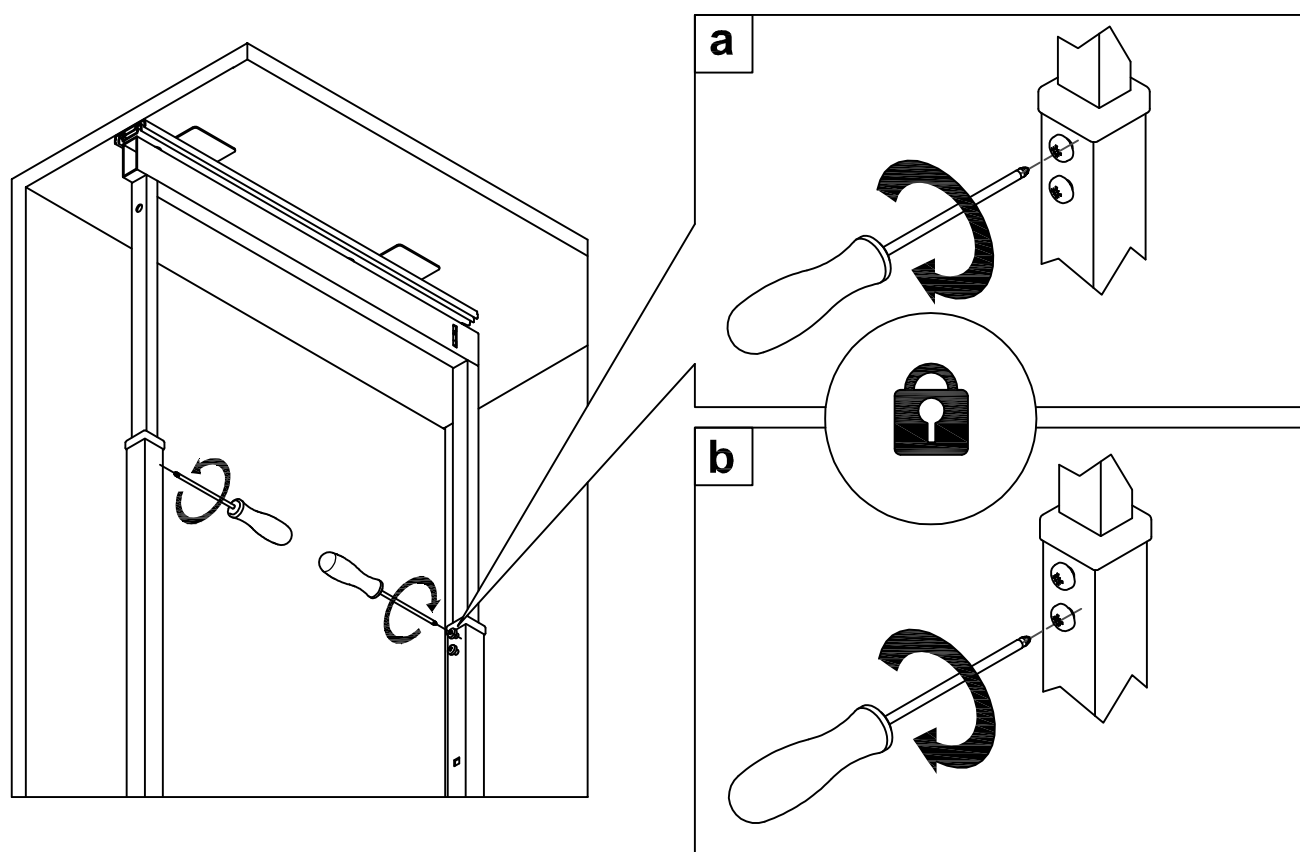

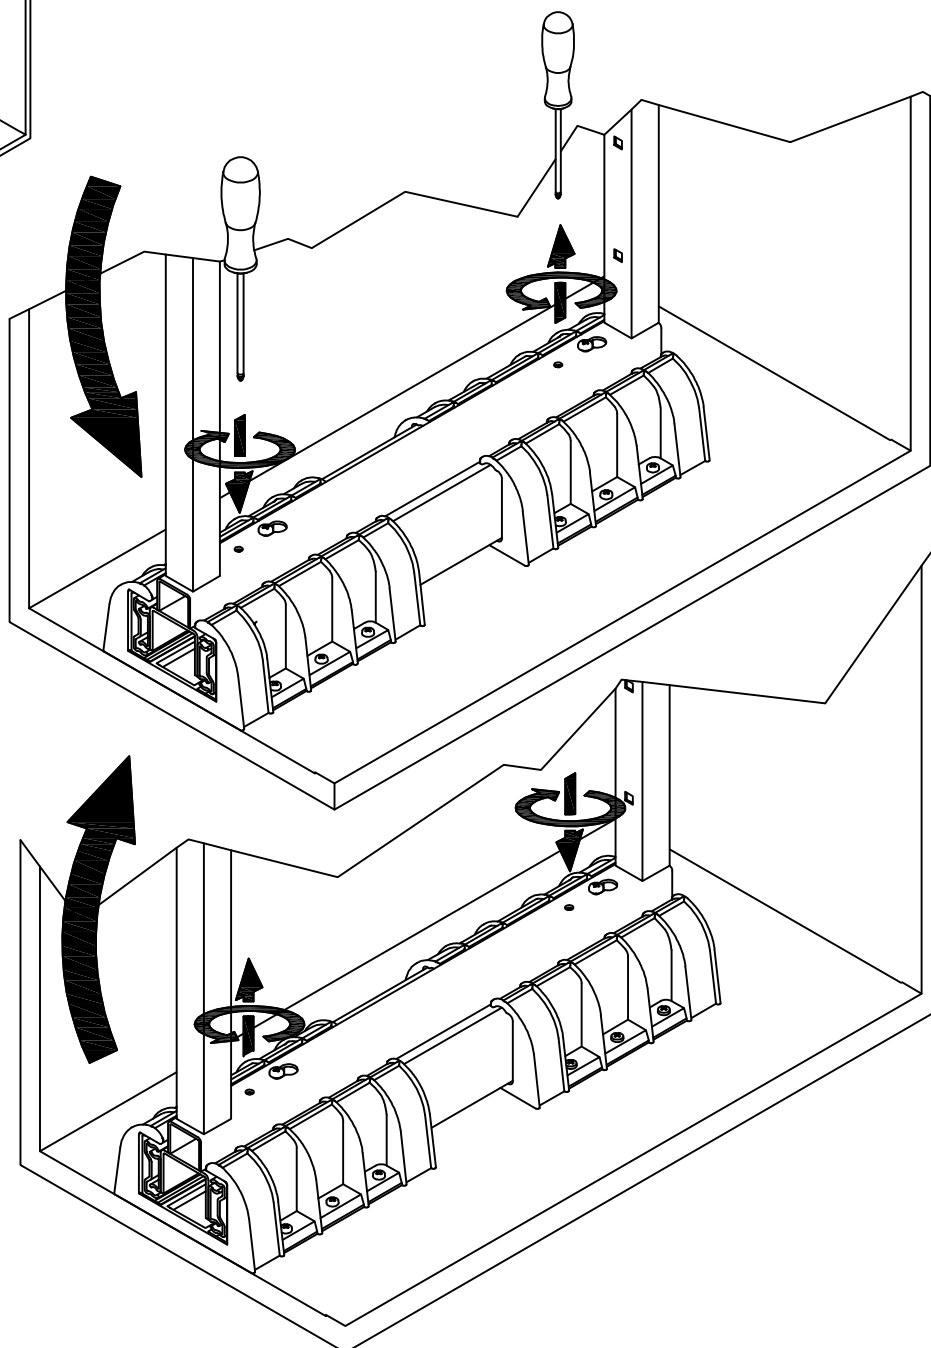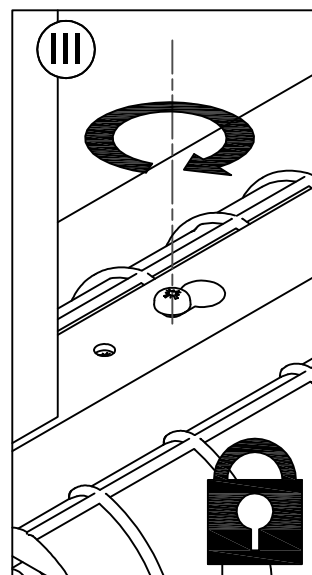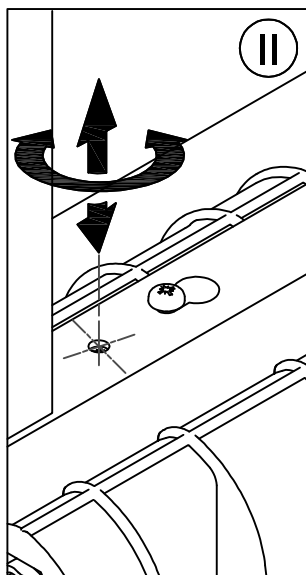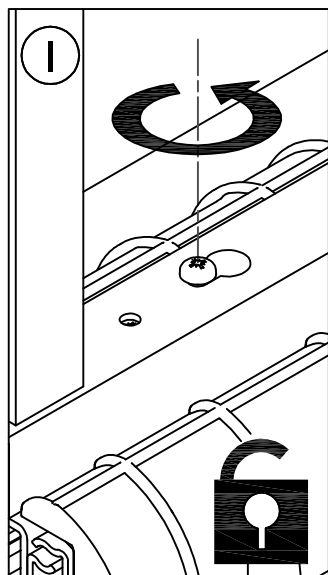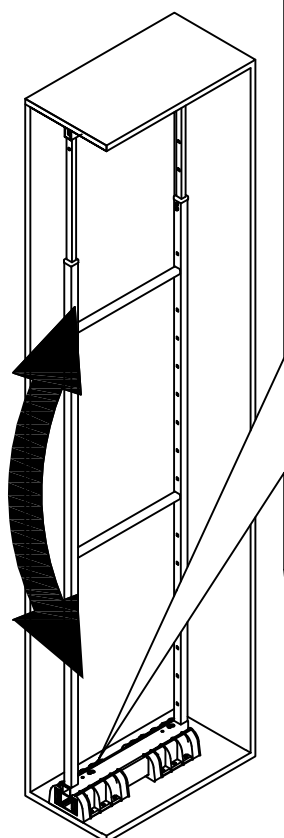

a

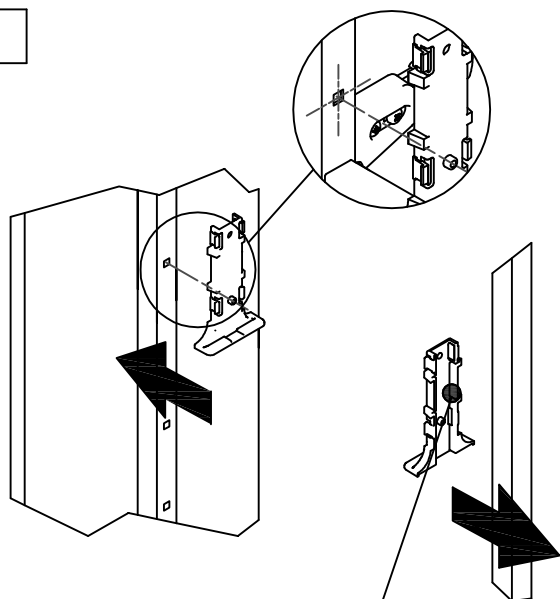


1852W

D

1852

b

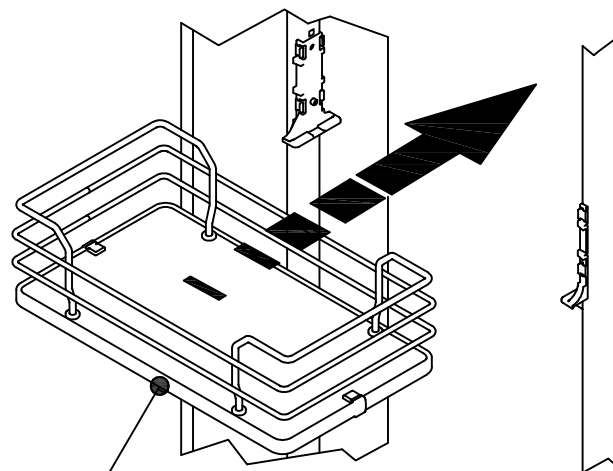


1852W

1852

E





c

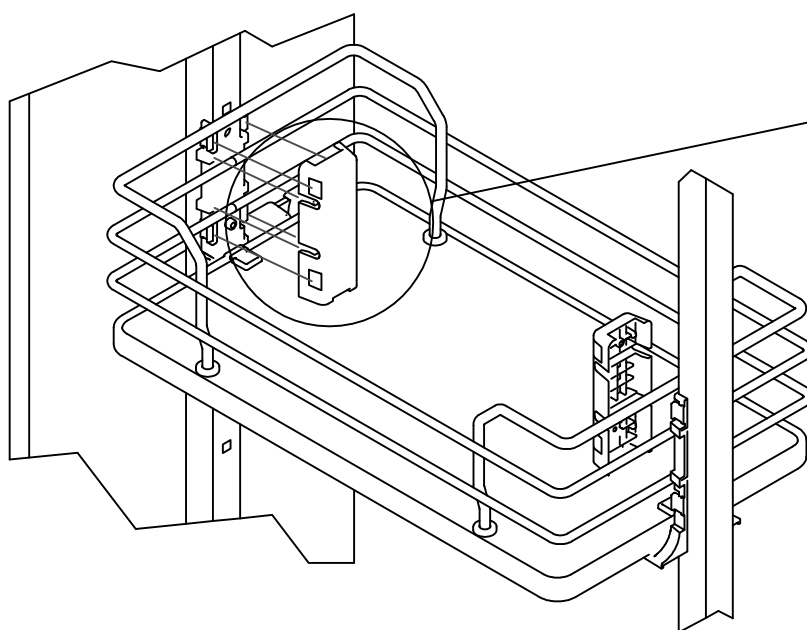

1852


1852W

F

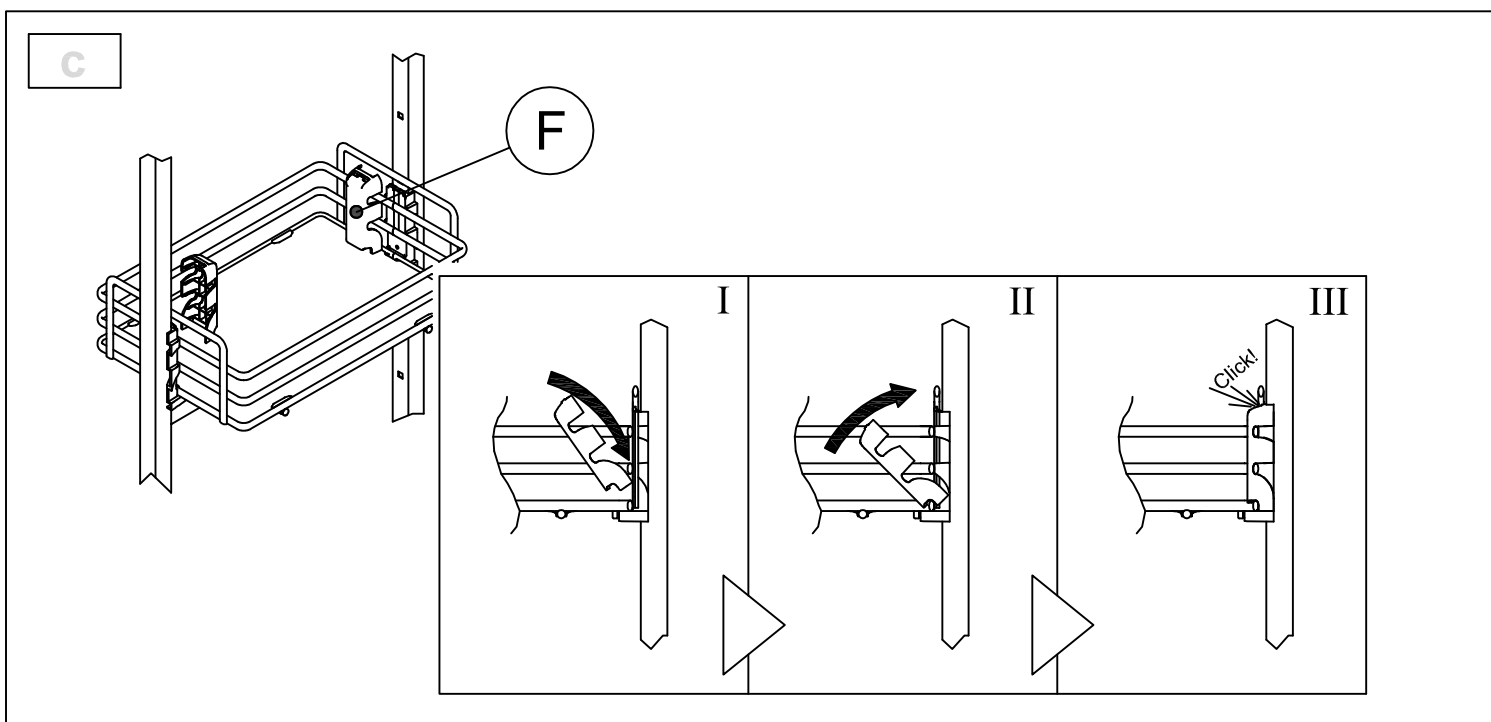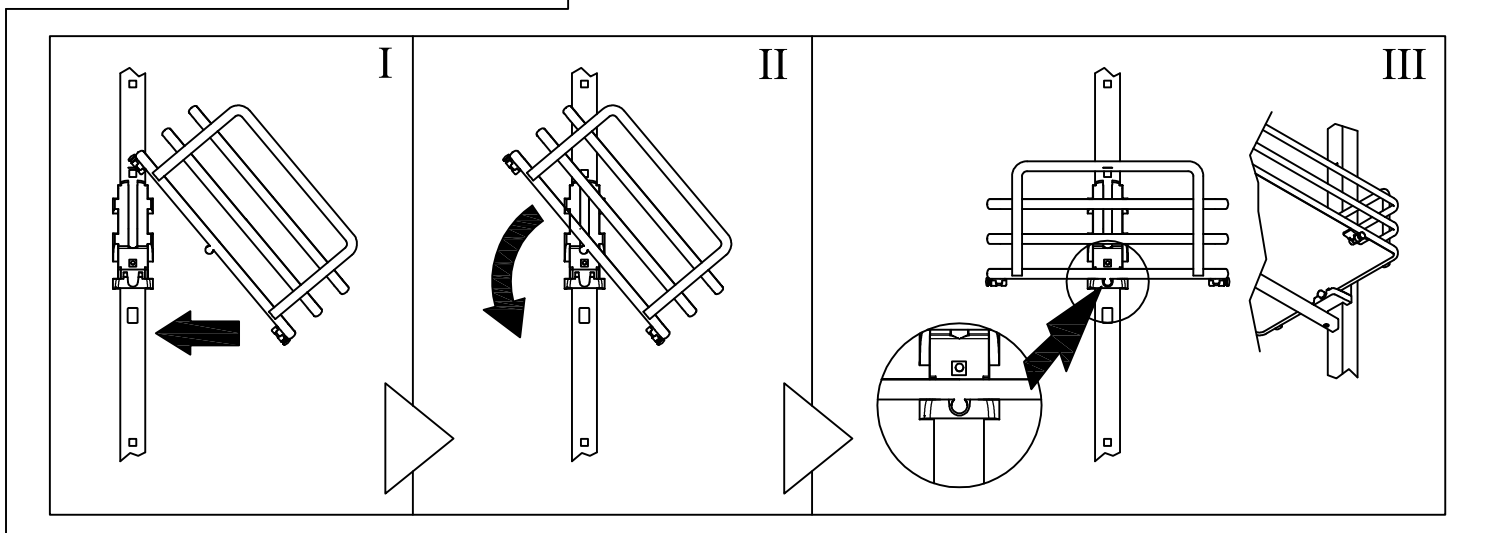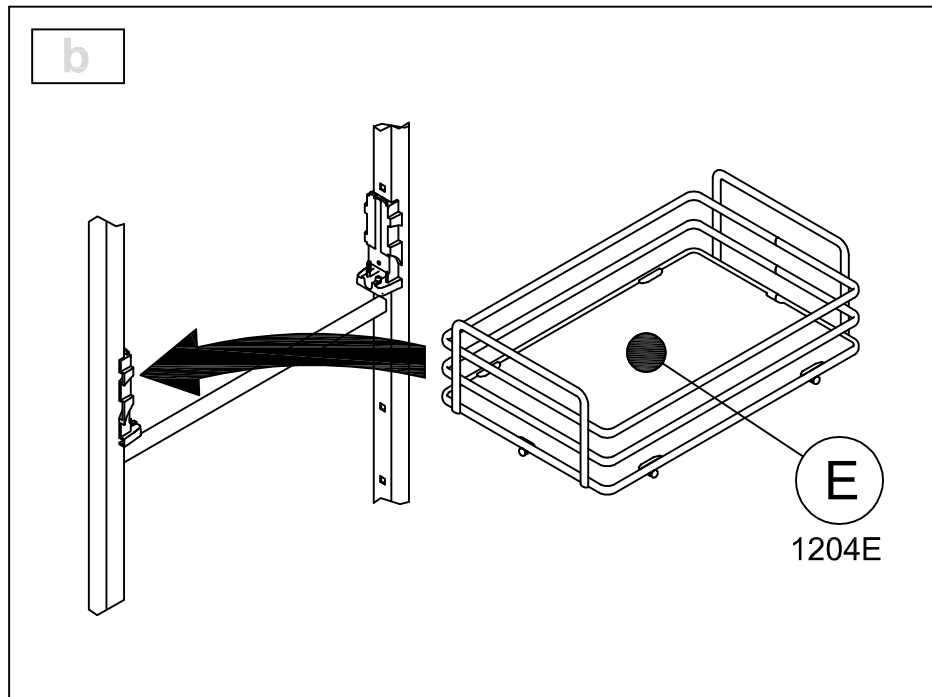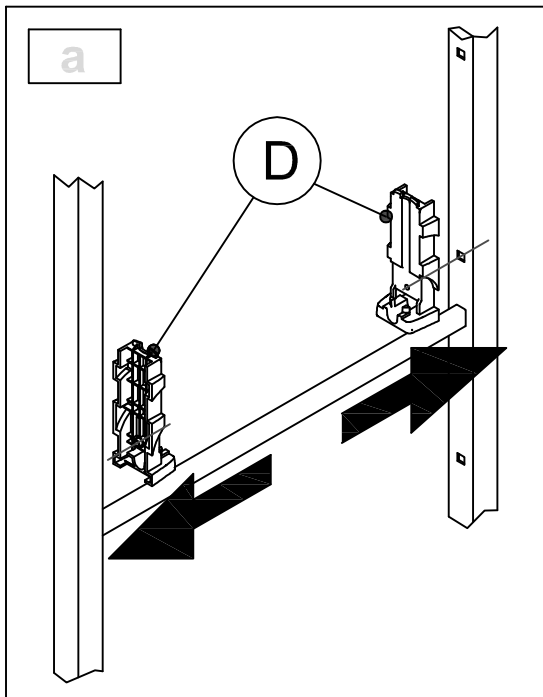

MONTAGGIO CESTO AGGIUNTIVO - *Additional Basket Assembly*

a



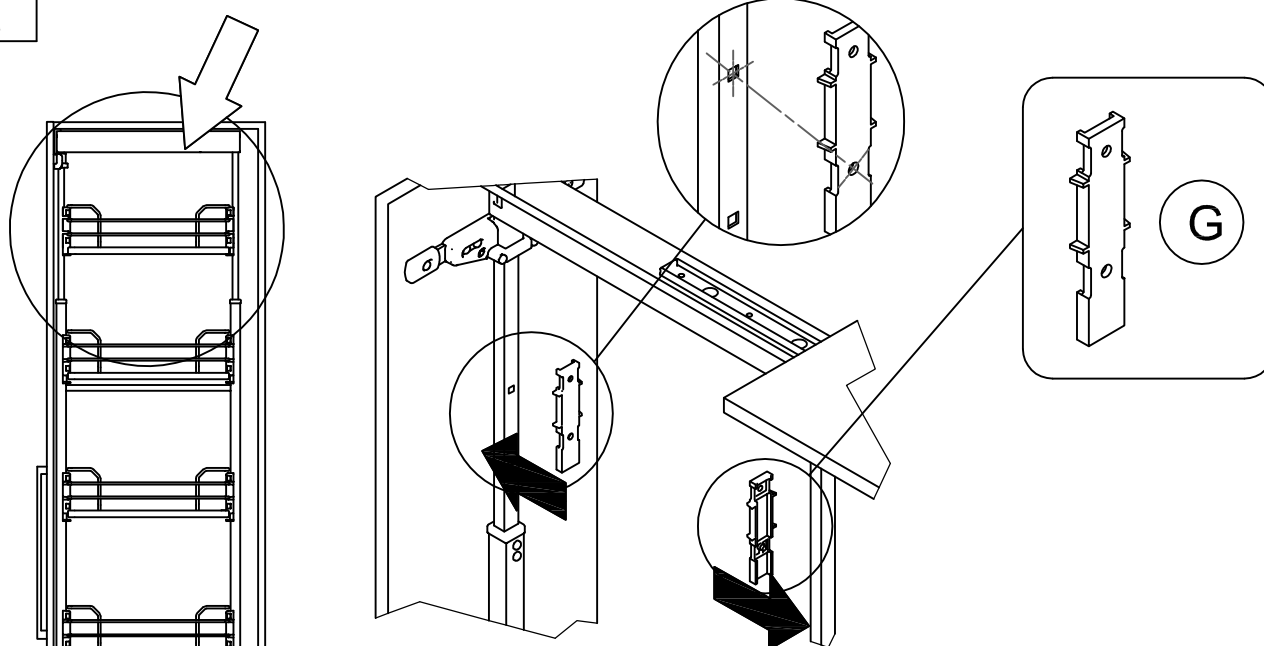


b


1852

1852W


1852E

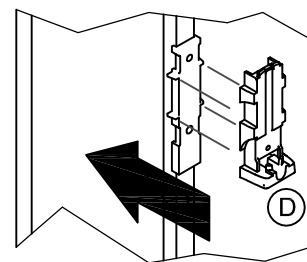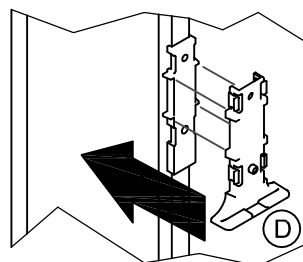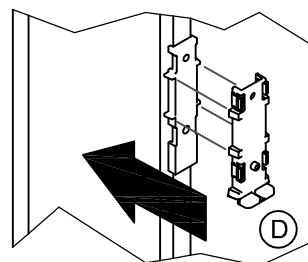

c

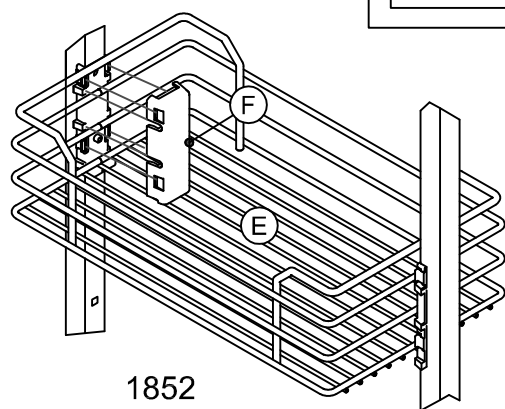

1852

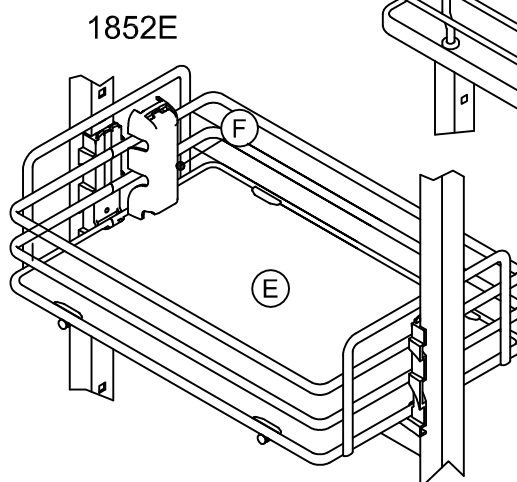

1852E

1852W

