

































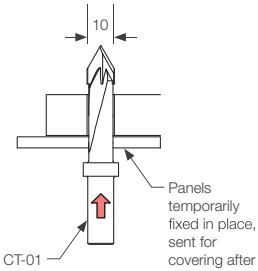
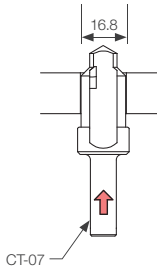
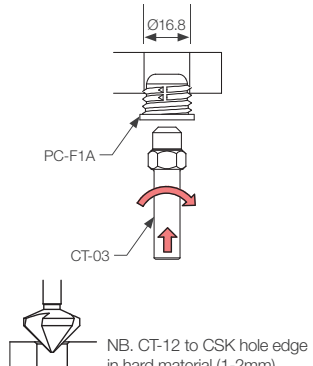
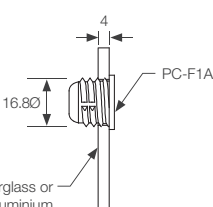
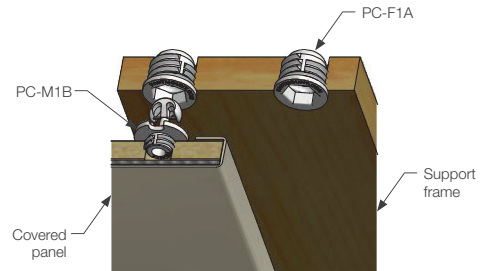


PC-F1A Self Tapping Female

(page 1 of 2)



































PC-F1A	USE WITH:	INSTALL WITH:													
	<table border="0"> <tr> <td data-bbox="319 375 386 438">PC-M1B </td> <td data-bbox="397 375 464 438">PC-VM1 </td> <td data-bbox="476 375 543 438">PC-SM2 </td> </tr> <tr> <td data-bbox="319 446 386 510">PC-M2H </td> <td data-bbox="397 446 464 510">PC-VMX </td> <td data-bbox="476 446 543 510">PC-SM2H </td> </tr> <tr> <td colspan="3" data-bbox="543 446 604 526">PC-SM1AC </td> </tr> </table>	PC-M1B 	PC-VM1 	PC-SM2 	PC-M2H 	PC-VMX 	PC-SM2H 	PC-SM1AC 			<table border="0"> <tr> <td data-bbox="677 375 744 502">CT-01 </td> <td data-bbox="756 375 823 502">CT-07 </td> <td data-bbox="834 375 901 502">CT-03 </td> <td data-bbox="912 375 980 502">CT-10 </td> </tr> </table>	CT-01 	CT-07 	CT-03 	CT-10 
PC-M1B 	PC-VM1 	PC-SM2 													
PC-M2H 	PC-VMX 	PC-SM2H 													
PC-SM1AC 															
CT-01 	CT-07 	CT-03 	CT-10 												

INSTALLATION STEPS FOR UPHOLSTERED PANELS

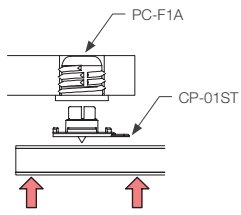
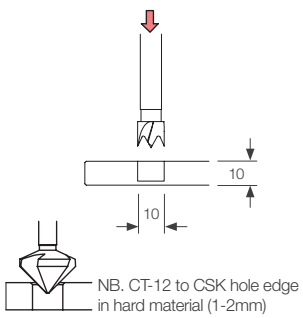
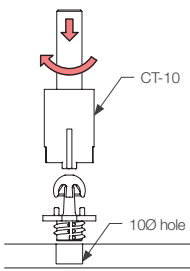
<p>1 Drill hole through panel and frame</p>  <p>CT-01</p> <p>10</p> <p>Panels temporarily fixed in place, sent for covering after drilling</p>	<p>2 Drill out frame hole with CT-07</p>  <p>CT-07</p> <p>16.8</p>	<p>3 Screw fit PC-F1A with CT-03. Use battery drill with clutch set.</p>  <p>PC-F1A</p> <p>CT-03</p> <p>Ø16.8</p> <p>NB. CT-12 to CSK hole edge in hard material (1-2mm)</p>
<p>4 Screw fit PC-F1A into thin frame</p> <p>PC-F1A can be used as screw / friction fit into thin frames and seat backs</p>  <p>PC-F1A</p> <p>4</p> <p>16.8</p> <p>Fiberglass or Aluminium</p> <p>NB. CT-12 to CSK hole edge in hard material (1-2mm)</p>	<p>5 Cutaway view showing panel mounting</p>  <p>PC-F1A</p> <p>PC-M1B</p> <p>Covered panel</p> <p>Support frame</p>	

PC-F1A Self Tapping Female


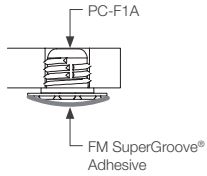
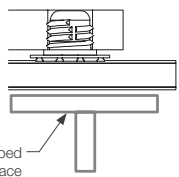
(page 2 of 2)

PC-F1A	USE WITH:	INSTALL WITH:													
	<table border="0"> <tr> <td>PC-M1B </td> <td>PC-VM1 </td> <td>PC-SM2 </td> </tr> <tr> <td>PC-M2H </td> <td>PC-VMX </td> <td>PC-SM2H </td> </tr> <tr> <td></td> <td></td> <td>PC-SM1AC </td> </tr> </table>	PC-M1B 	PC-VM1 	PC-SM2 	PC-M2H 	PC-VMX 	PC-SM2H 			PC-SM1AC 	<table border="0"> <tr> <td>CP-01ST </td> <td>CT-09 </td> <td>CT-07 </td> <td>CT-10 </td> </tr> </table>	CP-01ST 	CT-09 	CT-07 	CT-10 
PC-M1B 	PC-VM1 	PC-SM2 													
PC-M2H 	PC-VMX 	PC-SM2H 													
		PC-SM1AC 													
CP-01ST 	CT-09 	CT-07 	CT-10 												

INSTALLATION STEPS FOR PAINTED OR PRE-FINISHED PANELS (First complete steps 1 to 3, page 1)

<p>1 Fit CP-01ST into PC-F1A then push panel to mark center</p> 	<p>2 Drill panel on center mark with CT-09 6mm deep for PC-M1B, 8mm deep for PC-VM1, PC-VMX, PC-M2H</p>  <p>NB. CT-12 to CSK hole edge in hard material (1-2mm)</p>	<p>3 Screw fit male clip with CT-10. Use battery drill with clutch set.</p> 
--	--	---

INSTALLING ADHESIVE FIT MALE CLIPS (FIRST COMPLETE STEPS 1 TO 3, PAGE 1)

<p>4 Clip PC-SM2 into PC-F1A</p>  <p>PC-SM2 or PC-SM2H</p>	<p>5 Apply adhesive to PC-SM2</p>  <p>PC-F1A</p> <p>FM SuperGroove® Adhesive</p>	<p>5 Place panel and support while adhesive dries</p>  <p>Panel propped in place</p>
--	--	---