









**PC-SVMX** Surface mount male screw fix - 15kg


 <p><b>PC-SVMX</b></p>	<p><b>USE WITH:</b></p> <p>PC-F1A  </p> <p>PC-SF1    PC-RF1    PC-AF1          </p>	<p><b>INSTALL WITH:</b></p> <p>3 x #6 screw    CT-13A    CT-03    CT-05</p>   
--	---	---

**INSTALLATION STEPS**


- 1** Drill CT-13A through frame or substrate

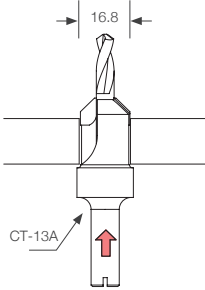


- 2** Screw fit PC-F1A with CT-03. Use battery drill with clutch set.

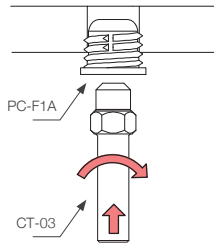


- 3** Clip PC-SVMX into PC-F1A to mark male clip location on panel. If using hard panels e.g. HPL, use CP-01ST to mark location.

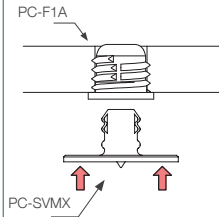

- 4** Press panel onto PC-SVMX to mark male clip position on panel.

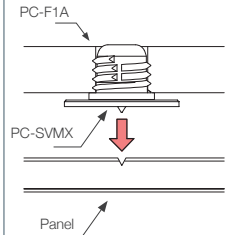

- 5** Un-clip PC-SVMX from PC-F1A using CT-05, position PC-SVMX in mark and install with 3 x #6 screws

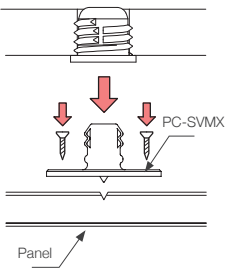

- 6** Clip panel into place.

